

Outdoor Wood Refresher

1. Product description

Intensive cleaning product for all hardwood surfaces which have turned grey with time. Very good adhesion and virtually non-drip. Quickly bleaches all greyed wood surfaces, giving a refreshed appearance. Wood regains its natural colour.

2. Areas of application

Terraces, gazebos, pavilions, boat planks, jetties and bridges, as well as all kinds of garden furniture, such as tables, chairs, benches made of hardwood, e.g. afzelia, afrormosia, Douglas fir, oak, frameri, ilomba, iroko, jatai, kaori, larch, makroé, meranti, Oregon pine, radiate pine, red cedar, red narra, redwood, robinia, sapelli, sipo or teak, especially suitable for bankirai.

Also good for lightening greyed conifer wood.

3. Application

Clear any dust and coarse dirt from the surface, using a broom or soft cloth. Moisten the wood surface with clear water beforehand. Apply the wood refresher generously onto the surface, using a brush (synthetic bristles without any metal parts), or a roller, then leaving at least 10 mins. for it to soak in. Finally, with any remaining product touch up directly along the wood fibres with an abrasive fleece (e.g. a sponge with white pad, or a coarse scrubbing brush). Keep rinsing the abrasive fleece, or scrubbing brush in water. After cleaning, rinse the surface thoroughly with water (e.g. with a garden hose). In the case of very stubborn stains, or heavily soiled surfaces, repeat the treatment and allow the wood refresher to soak in for longer. After drying, use a care product to protect the wood surfaces anew, e.g. Terrace oil, or Bankirai oil.

Please note:

Protect sensitive bordering surfaces from splashes, e.g. with protective foil. Avoid contact with metal during application, as far as possible use brushes bound with plastic, or with synthetic bristles.

For cleaning purposes, never use a high-pressure hose, or hard sandpaper, because this roughens the surface, which means the natural wax and oil ingredients stay on the top and are weathered away, while the wood becomes more sensitive to dirt and water.

In order to remove stains and discoloration, and to achieve a smooth surface, sand the wood with very fine sandpaper (400 grain) by hand. If a mechanical sander is used, heat is produced which can lead to black indentations forming. Remove sanding dust with a moist cloth.

Consumption: approx. 150-200 gm/sq.m. Establish precise consumption with a trial application

4. Technical Data

pH value: approx. 0.5
Contains substances: 5-15% organic acid, <5% non-ionic tenside
Giscode: GG60

Outdoor Wood Refresher is subject to the legal regulations concerning hazardous substances and displays the hazard symbol "Xn" and the hazard description "injurious to health if in contact with skin or if swallowed". When working with the product, always wear suitable protective gloves and goggles/face protection. Only use in well-ventilated areas.

Store Outdoor Wood Refresher in closed original container, in a cool and dry place.
Keep the container sealed and out of the reach of children

5. Container sizes

750 ml – bottle
2.5 litre – canister

The above advice on procedure for use is based on the best of our knowledge and the latest information available on cleaning technology. For this reason, when using our quality products, no damage will be incurred to the materials to be cleaned if strict attention is paid to the instructions printed on the container and the procedure suggested by us is followed. The use to which our products are put is, however, beyond our control. It is the responsibility of the user and does not release the user from making his own checks of the products supplied by us as to their suitability for the intended procedure and purposes. The information supplied by us is therefore non-binding and cannot be used as a basis for establishing the company's liability for any damage incurred. This also includes the infringement of any rights for the protection of third parties.