

strato classic prime 200



1 PRODUCT DESCRIPTION

Sealer for wood, parquet and cork floors. Waterbased, low emission and almost odorless. Gives wood a warm color. Especially suitable for colored exotic wood.

Quick drying, reduced wood roughening, reduces edge bonding. Can be used with all strato sealers. Reduced voc-content. Giscode W2+.

abZ-Nr. under 1K-strato-sealers: Z-157.10-84

abZ-Nr. under 2K-strato-sealers: Z-154.10-85

2 AREAS OF APPLICATION

Primer for wood and parquet floors before topcoating with all strato lacquers.

3 APPLICATION

Shake up **strato classic prime 200** well, apply evenly with the Aquatop-Roller.

- The professionally sanded and grouted subsurface must be in a clean, dry condition, free of oil, wax and dust.
- A light cutting with abrasive mesh 120 is possible before further sealing, and improves the surface result.
- Room and material temperature must not be allowed to fall below +15°C during application and drying time.
- The rules of the professional trade are to be observed.

4 CONSUMPTION

approx. 120-150 ml/m² (7-8 m²/l).

For best results and an even surface image, work in thick layers. In the case of highly absorbing wood increased consumption is possible.

5 DRYING TIME

Can be carefully walked on, or worked on again, after about 3 hours (at 20 °C and 50% relative humidity, ventilation).


For the sake of the wood and the avoidance of excessive swelling, only one rolled coat of water-based lacquer per day is recommended. Low temperatures, increased humidity, poor ventilation and drying inhibiting wood ingredients can extend the drying time substantially.

The use of a ventilator is recommended to improve oil hardening.

7 STORAGE

Protect from frost. Store in a cool dry place. Can be stored for 12 months from date of manufacture in unopened

strato classic prime 200

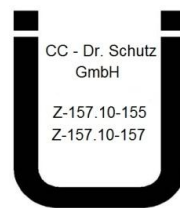

Oberflächenbehandlung
für Holzböden nach
DIN/EN 14342



original canister.

If stored in changing temperatures and in opened canisters, dry parts can form. Filter these out with a sieve before using. Keep coating materials out of the reach of children.

8 TECHNICAL DATA

Contains substances: water, polyacrylates, silicic acid, glycol ethers, additives. Contains 5-chloro-2-methyl-4-isothiazolin-3-one and 2-methyl-2H-isothiazol-3-one (3:1). May produce an allergic reaction.

voc (g/l) 49 (ISO11890) / GISCODE: W2+ / 2004/42/IIA(i)(140)140.

ADR/RID: not a dangerous good as defined by transport regulations.

CLP: The product is not classified according to the CLP regulation.

Even when using low-pollution products, the usual safety measures are to be observed. Keep out of the reach of children. Completely emptied canisters can be disposed of in domestic waste.

8 SPECIAL NOTES

- Please pay attention to the printed batch number. Only use products with the same batch number in one layer. In the case of a different batch, mix this in a separate container before using.
- Clean working tools with water. We recommend that you leave the well-washed roller fully covered in water, in order to avoid it drying out. However, when the roller is used anew for application, no water must be allowed to mix with the lacquer.


9 CROSS-REFERENCE

Our following publications in their updated form are valid as an integral part of this fact sheet:

- General notes on the application of eukula finishes
- Safety data sheet available on request.

The quoted printed matter, as well as this product information in its updated form, is available on our homepage www.eukula.com or on request from the address quoted below.

strato classic prime 200

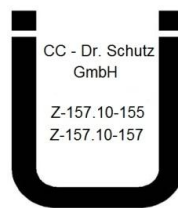

Oberflächenbehandlung
für Holzböden nach
DIN/EN 14342



eukula – We Care About Wood Floors

Headquarter
CC-Dr. Schutz GmbH
Holbeinstraße 17
D-53175 Bonn
Tel.: + 49 228 / 95 35 2-40
Fax: + 49 228 / 95 35 2-46
E-Mail: export@dr-schutz.com
www.dr-schutz.com

UK
Dr. Schutz U.K Ltd.
Unit 24, Anglo Business Park,
Smeaton Close, Aylesbury Bucks
HP19 8UP

Contact: Richard Nelson
Tel.: 0044 / 1296 437827
Fax: 0044 / 1296 334219
E-Mail: richard@dr-schutz.com

Ireland
Dr. Schutz Ireland
35 Pic Du Jer Park,
Ballinlough, Cork

Contact: Paul O'Reardon
Mobile: 0877678388
E-Mail:
drschutzireland@gmail.com

North America
Schutz NA
4701 Bath St 46, Philadelphia
PA 19137, USA

Contact: Sam Jamison
Tel.: 001 / 877 272 4889
Mobile: 001 / 215 510 7874
E-Mail: sam@schutzNA.com

The above advice for technical application is given to the best of our knowledge and according to the latest state of technology. Therefore, if our products are used carefully heeding the advice given on their application, as well as following our suggested procedures with the materials intended for use with these products, no damage shall occur. However, our products are used outside and beyond our possible control, and are therefore subject to your own responsibility, which does not release you from the obligation to check for yourself whether our supplied products are suitable for your intended purpose and procedure. Therefore our notes and advice are not legally binding and cannot be used against us as grounds for liability - which includes the rights and protection of any third party. The relevant recommendations, guidelines and standard norms are to be observed, as well as the recognized technical rules. On publication, this product information replaces and supersedes the validity of any previous versions.